


AC50P

Portable Power Station

User Manual v1.0

Please Read This Manual Before Use And Follow Its Guidance.
Keep This Manual For Future Reference.



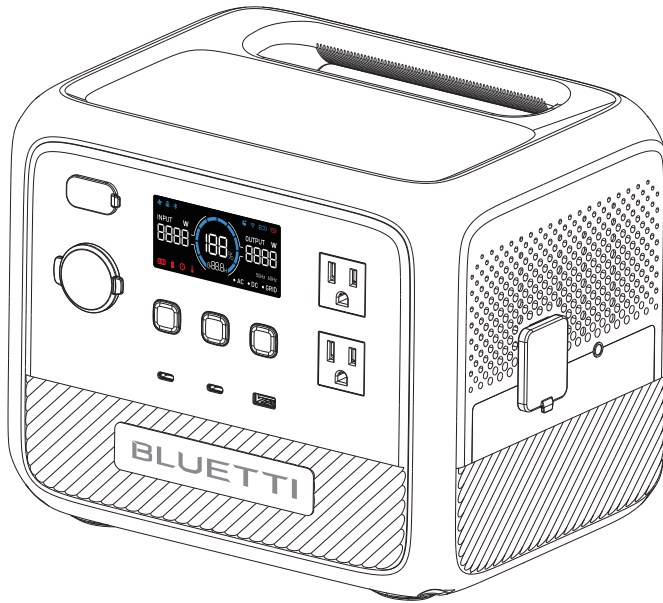

Warning

1. Charge the unit before first use.
2. Do not use solar panels with open circuit voltage higher than 28V. Solar input voltage range for the unit is 12V-28V.
3. Charge the unit immediately when the SoC drops below 5%. If the SoC drops to 0, power off the unit and charge it for at least 30 minutes before restarting.
4. The unit is for off-grid use only. Do not connect its AC output to the grid.
5. If not used for more than 3 months, charge the unit to 40%-60% SoC and store it with the power off. For optimum battery life, discharge and charge the unit every 3 months.

Thank You

Thank you for making BLUETTI a part of your family.

From the very beginning, BLUETTI has tried to stay true to a sustainable future through green energy storage solutions while delivering an exceptional eco-friendly experience for our homes and our world.

That's why BLUETTI makes its presence in 100+ countries and is trusted by millions of customers across the globe.



Copyright © Shenzhen PowerOak Newener Co., Ltd. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without the prior written consent of Shenzhen PowerOak Newener Co., Ltd.

Shenzhen PowerOak Newener Co., Ltd.

F19, BLD No.1, Kaidaer, Tongsha RD No.168, Xili street, Nanshan, Shenzhen, China

Web: <https://www.bluettipower.com>

Notice



BLUETTI's products, services, and features are subject to the agreed-upon terms and conditions during purchase. Please note that some products, services, or features described in this manual may not be available under your purchase contract. Unless otherwise specified in the contract, BLUETTI makes no representations or warranties of any kind, express or implied, with respect to the contents of this manual.

The contents of this manual are subject to change without notice. Please get the latest version from: <https://www.bluettipower.com/pages/user-guides>

If you have any questions or concerns about this manual, please contact BLUETTI support for further assistance.

Symbol Conventions

This manual uses the following symbols to highlight important information:

Symbol	Category	Description
	Warning / Attention	It indicates a hazardous situation which, if not avoided, could result in death or serious injury.
	Notice	It indicates a potentially hazardous situation which, if not avoided, could cause substantial damage to property and the environment.

Contents

1	Safety Instructions	06
2	Packing List	10
3	Product Introduction	11
4	Product Overview	11
5	Power ON/OFF	12
6	LCD Display	12
7	Charging	14
8	Discharging	16
9	Settings	16
10	BLUETTI App	18
11	Specifications	19
12	Troubleshooting	20
	Appx. 1 Estimating Operation Time	21
	Appx. 2 FAQs	21
	Appx. 3 Grounding Guidelines	22
	Appx. 4 FCC Statement	23
	Appx. 5 IC Caution	24

1. Safety Instructions

Read this manual for instructions on the proper use and safety information for the product. The safety instructions provided herein are for illustrative purposes that include but are not limited to those listed in this manual. Actual operation shall comply with all applicable safety standards. If you have any questions, feel free to contact BLUETTI support or your local BLUETTI dealers.

1.1 Statement

To ensure a safe operation, it's crucial to observe and adhere to the following conditions:


- Always operate or store the product in the conditions specified in this manual.
- The installation and ambient conditions must comply with the requirements in the relevant international, national, or regional standards.
- Avoid unauthorized disassembly, component replacement, or modification of software codes.

BLUETTI shall not be liable for the following circumstances:

- Damage resulting from force majeure events such as earthquakes, fires, storms, floods, or mudslides.
- Damage caused by the customer's own transportation.
- Damage resulting from inadequate storage conditions as specified in the manual.
- Damage caused by customer negligence, improper operation, or intentional actions.
- System damage caused by third parties or customers, including but not limited to improper handling and installation not in accordance with the instructions in this manual.
- The product doesn't fulfill power supply needs for power-reliant equipment in critical sectors like atomic energy, aviation, medical, and other domains where safety is paramount. BLUETTI assumes no liability for incidents involving personal safety, fire, equipment malfunction, or any adverse aftermath resulting from using this product with such equipment.
- Damage caused by adjustments, changes, or removal of labels in violation of this manual.
- This product is not intended for use with devices that require a high-performance Uninterruptible Power Supply (UPS), including but not limited to data servers, workstations, medical equipment, and other similar devices. BLUETTI shall not be liable for any data loss, equipment damage, or personal injury resulting from the violation of this requirement.

1.2 General Requirements

INSTRUCTIONS PERTAINING TO RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS
IMPORTANT SAFETY INSTRUCTIONS

 **WARNING** - When using this product, basic precautions should always be followed, including the following:

- Read all the instructions before using the product.
- To reduce the risk of injury, close supervision is necessary when the product is used near children.
- Do not put fingers or hands into the product. And do not insert foreign objects into any ports of the product.
- Use of an attachment not recommended or sold by the manufacturer may result in a risk of fire, electric shock, or injury to persons.
- To reduce the risk of damage to the electric plug and cord, pull the plug rather than the cord when disconnecting the product.
- Do not use a battery pack or appliance that is damaged or modified, as they may exhibit unpredictable behavior resulting in fire, explosion, or personal injury.
- Do not operate the product with a damaged cord or plug, or a damaged output cable.
- Do not attempt to replace the internal battery or any other component of the product by anyone other than authorized personnel. There are no end-user serviceable components. Do not disassemble the product, take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or electric shock.
- To reduce the risk of electric shock, unplug the product from the outlet before attempting any instructed servicing.
- **WARNING - RISK OF EXPLOSIVE GASES.** To reduce the risk of battery explosion, follow these instructions and those published by the battery manufacturer and manufacturer of any equipment you intend to use in the vicinity of the battery. Review cautionary markings on these products and engines.
- **PERSONAL PRECAUTIONS**
 - a. Wear complete eye protection and clothing protection. Avoid touching eyes while working near the battery.
 - b. Never smoke or allow a spark or flame in the vicinity of the battery or engine.
 - c. Be extra cautious to reduce the risk of dropping a metal tool onto the battery. It might spark or short-circuit the battery or other electrical parts which may cause an explosion.
- When charging the internal battery, work in a well ventilated area and do not restrict ventilation in any way.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Do not expose the product to fire or excessive temperature. Exposure to fire or temperature above 130°C (266°F) may cause an explosion.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that safety is maintained.

- Do not stack anything on top of the product while in storage or use. Do not move the product while operating as vibrations and sudden impacts may lead to poor connections to the hardware inside.
- In case of fire, use only a dry powder fire extinguisher appropriate for the product.
- **WARNING - RISK OF ELECTRIC SHOCK.** Never use the product to supply power tools to cut or access live parts or live wirings, or materials that may contain live parts or live wirings inside, such as building walls, etc.
- The cigarette lighter port, categorized as PS3 according to the IEC 62368-1 standard, should take into account the fire safety measures of the connected devices or accessories (such as fire-resistant casings).

1.3 Grounding Instructions

This product must be grounded when connected to the grid. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.

⚠ WARNING - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it does not fit the outlet, have a proper outlet installed by a qualified electrician.

1.4 Handling Requirements

During transportation or storage, take care to avoid dropping, violently impacting, or tilting the product as it may result in internal damage. If necessary, use mechanical assistance such as carts or adjustable height workbenches to ensure safe handling.


Recommended Number of People Based on the Weight of Product

Weight	Number of people
<18kg (39.7lbs)	1
18kg-32kg (39.7lbs-70.5lbs)	2
32kg-55kg (70.5lbs-121.3lbs)	3
>55kg (121.3lbs)	4 or a cart



1.5 User Maintenance and storage Instructions

- When the SoC drops to 5%, please charge the product immediately.
- Before storing the product, charge it to 40% to 60% SoC to keep it in optimal condition. In addition, power off the product and disconnect all electrical connections from it.

- Store the product in a cool and dry place, keeping it away from flammable or combustible materials and gases.
- The product can be safely stored within a temperature range of -20°C to 40°C (-4°F to 104°F). However, if the storage duration exceeds one month, it's recommended to maintain an ideal storage temperature of around 30°C (86°F).
- Fully cycle the product every 3 months to maintain the battery's health. It's NOT recommended to store the product for extended periods of time, as it may affect its performance and overall lifespan.

 If the SoC drops to 0 (during storage or upon startup), take the following actions to safely restart the product:

- Shut down immediately.
- Charge within 48 hours.
- Keep it at an ambient temperature of 5°C to 35°C (41°F to 95°F) for 6 hours before charging. It's recommended to charge the product via an AC source. If charging via solar energy, ensure that your solar system provides an output of more than 100W.

  The symbol displayed is intended to remind you to read the instructions in the literature accompanying the product before operation and maintenance.








- Connect the product to a socket-outlet that has an earthing connection using the power cord provided.
- The socket-outlet should be installed near the product and easily accessible for safety purposes.
- Never dispose of a battery by throwing it into fire or a hot oven, or by mechanically crushing or cutting it, as these may cause it to explode.
- Avoid leaving batteries in extremely high-temperature environments, as this can result in an explosion or the leakage of flammable liquid or gas.
- The battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.
- Attention should be drawn to the environmental aspects of battery disposal.
- Please refer to the information on the exterior enclosure for electrical and safety information before installing or operating the apparatus.

SAVE THESE INSTRUCTIONS

 BLUETTI shall not be liable for any equipment damage caused by the violation of the above instructions.



2. Packing List

Standard Packaging

Item	Picture	Qty.
Portable Power Station		1
AC Charging Cable		1
Car Charging Cable		1
Solar Charging Cable		1
Grounding Screws		1
User Manual		1
Warranty Card		1

Optional Accessories

(Available on the official BLUETTI website: <https://www.bluettipower.com>)

Item	Picture
USB-C to USB-C Cable (Output)	
Cigarette Lighter to DC5521 Cable (For 12V devices with DC5521 port, such as routers, cameras, etc.)	

3. Product Introduction


Introducing the AC50P portable power station—a reliable power solution with a 700W pure sine wave inverter and a 504Wh lithium iron phosphate (LiFePO₄) battery. Engineered for safety, portability, and reliability, it's ideal for keeping essential devices like car fridges, water heaters, fans, and laptops charged during your journeys.

Designed for efficiency, the AC50P features Turbo charging, allowing it to reach an 80% charge in just 50 minutes at a room temperature of 25°C with proper ventilation. Achieving a full charge takes roughly 80 minutes. If solar charging is your preference, it can fully charge in 3 hours. The AC50P is your practical and efficient power solution for on-the-go energy needs.

⚠ Attention:

Do not connect the AC output of AC50P to the grid.


4. Product Overview

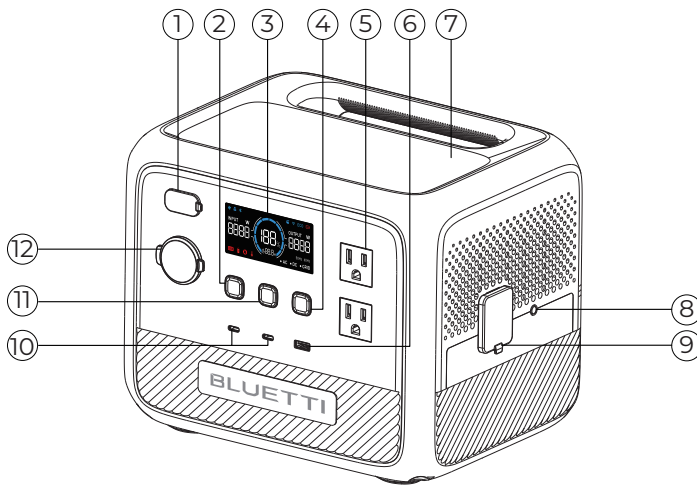

- | | |
|-------------------|--------------------------|
| ① DC Input | ⑦ Wireless Charging |
| ② DC Power Button | ⑧ Grounding Terminal* |
| ③ LCD Display | ⑨ AC Input |
| ④ AC Power Button | ⑩ USB-C Port |
| ⑤ AC Outlet | ⑪ POWER Button |
| ⑥ USB-A Port | ⑫ Cigarette Lighter Port |

* Refer to Appendix 3 for specific grounding guidelines.

5. Power ON/OFF

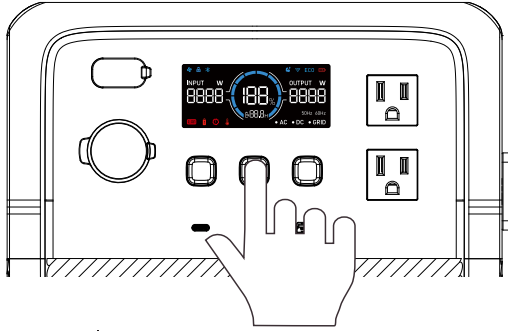


- **Power ON:** Press and hold (⏻) for about 2 seconds, the button lights up indicating that the AC50P is now on standby.
- **Power OFF:** Press and hold (⏻) for about 2 seconds to turn off the unit.
- **AC ON / OFF:** When the AC50P is on, press the AC power button to turn it on / off.
- **DC ON / OFF:** When the AC50P is on, press the DC power button to turn it on / off.
- **Restart:** Power off the AC50P first, then press and hold (⏻) for about 2 seconds to restart.

📖 Notice:







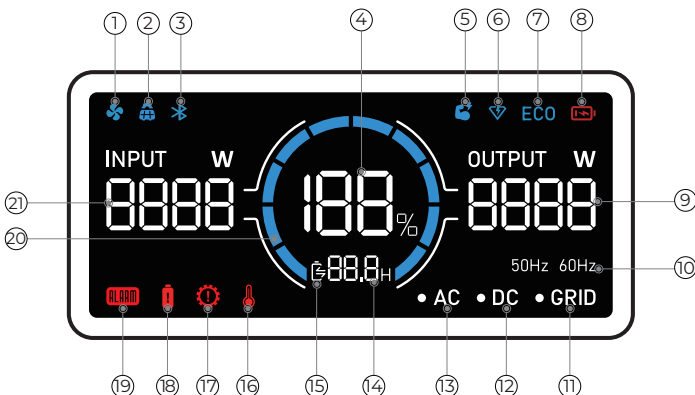
















When the AC50P is on, you can activate the LCD display by interacting with any of the buttons.

6. LCD Display

The AC50P features an informative LCD display that offers easy access to all the essential information about the unit's status and performance. When you power on the unit, the LCD display lights up, and when you power off the unit, the display turns off as well.



- ① Fan Status
- ② PV Input
- ③ Bluetooth Connection
- ④ Battery Capacity (SoC)
- ⑤ Power Lifting Mode
- ⑥ Turbo Charging
- ⑦ ECO Mode
- ⑧ Low Battery Alert
- ⑨ Output Power
- ⑩ AC Output Frequency
- ⑪ Grid Connection
- ⑫ DC Output
- ⑬ AC Output
- ⑭ Charge / Discharge Remaining Time
- ⑮ Charge / Discharge Status
- ⑯ Temperature Abnormal
- ⑰ Overload Alert
- ⑱ Overcurrent Alert
- ⑲ Fault Alert
- ⑳ Charge / Discharge Progress
- ㉑ Input Power

LCD Instructions	
Fan on or abnormal	 displays or flashes
PV input	 displays
Bluetooth connected	 displays
State of Charge	 displays
Power Lifting Mode enabled	 displays
Turbo Charging enabled	 displays
ECO Mode enabled	 displays
Battery low (below 5%)	 displays
AC/DC output power	 displays
AC output frequency	 displays
AC input	 displays
DC output enabled	 displays
AC output enabled	 displays
Remaining charge / discharge time (hour)	 displays
 : Charging;  : Discharging	 displays
Battery / unit overheating	 displays
Overload	 displays
Overcurrent	 displays
Error report	 displays
Remaining battery level (10% per bar)	 displays
Input power	 displays

7.Charging


AC50P supports four charging methods: AC, solar, car, and generator.

⚠ Attention:

- Double-check that all cables are firmly plugged in.
- Avoid getting the plug and socket wet to prevent any potential damage.

7.1 AC Charging

Plug the AC50P into a standard wall outlet and start charging. Once it's fully charged, the AC50P automatically stops charging to prevent overcharging. For a fast charge, you can enable Turbo Charging in the BLUETTI app, which allows for an 80% capacity in just 50 minutes at an ambient temperature of 25°C (77°F).

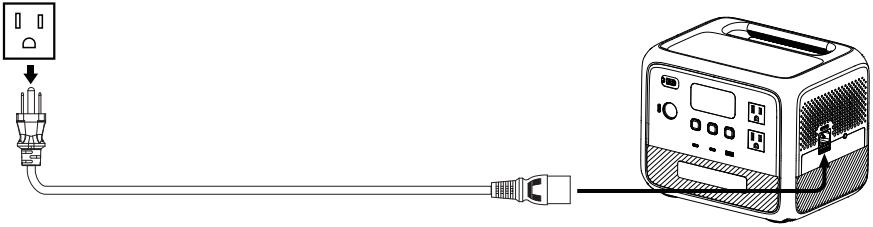


7.2 Solar Charging

Connect the solar panels (in series or parallel) to AC50P via the solar charging cable. When receiving a continuous input of 200W, the AC50P will automatically stop charging within 3 hours. However, please be aware that the charging time may vary based on weather conditions, sunlight intensity, panel orientation, and other variables.

📖 Notice:

Make sure your solar panel(s) meet the following requirements:

Voc: 12V-28V Current: 8.5A Max. Power: 200W Max.

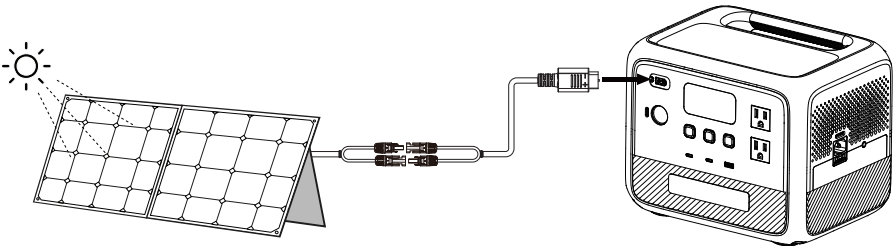


7.3 Car Charging

Connect the AC50P to the vehicle's 12V / 24V cigarette lighter port via the car charging cable. The AC50P also automatically stops charging when it's fully charged. On average, it takes about 5-7 hours to refill the AC50P using a 12V port and 3-4 hours with a 24V port at an ambient temperature of 25°C (77°F).


Notice: Make sure your vehicle meets the following conditions for charging:

- The vehicle is capable of supplying power.
- The vehicle's engine is running during the charging process.

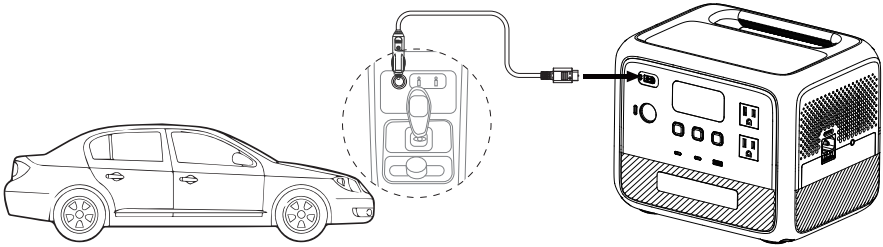

7.4 Generator Charging

Connect the AC50P to a generator via the AC charging cable. The AC50P also automatically stops charging when it's fully charged. It takes approximately 1.2 hours to reach a full charge at an ambient temperature of 25°C (77°F) if the generator output is stable.

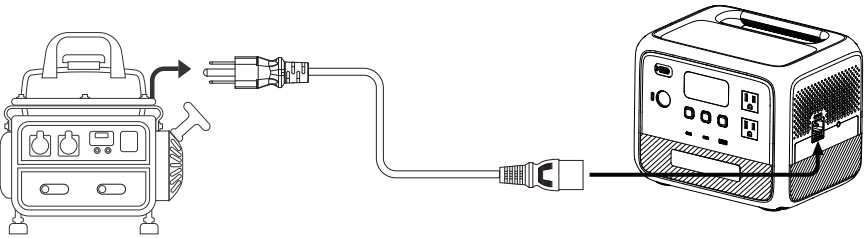

Notice:

- Make sure your generator delivers pure sine wave AC output with charging voltage and frequency that meet AC50P's specifications.
- If the total power demand of your connected devices exceeds the generator's output capacity, please turn on the Grid Self-adaption Mode to ensure a seamless charging experience.
- For stable and efficient charging, avoid using unreliable power sources like wind turbines.

8. Discharging

8.1 AC Discharging

Item	Specifications	Compatible Loads
2 × AC Outlet	120V / 220V 50Hz / 60Hz	Appliances up to 700W power.

Notice:

Do not apply AC50P to loads higher than 700W, as this may cause damage to AC50P and your devices.

8.2 DC Discharging

Item	Specifications	Compatible Loads
1 × Cigarette Lighter Port	12V / 10A	12V DC appliances up to 120W power. e.g. car refrigerator
1 × USB-A Port	5V / 3A	Mobile phones and other small loads.
2 × USB-C Port	5 / 9 / 12 / 15 / 20V, 3A; 20V / 3.25A	Mobile phones, laptops, etc.

Notice:

To ensure optimal performance, avoid short-circuiting the ports and keep them dry during use or storage. Additionally, do not block or cover the ports while ensuring proper ventilation.

9. Settings

The AC50P offers the convenience of adjusting its settings either via physical buttons or the BLUETTI app. With the buttons located on the device itself, you have direct control over various settings such as ECO Mode, output frequency, charging modes, and other functionalities. Additionally, by using the BLUETTI app, you can access a user-friendly interface on your phone to conveniently monitor and control the AC50P.


9.1 Enter Setting Mode


When the display is on and the AC output is off, press and hold the AC and DC power buttons for about 2 seconds till the output frequency flashes to enter the Setting Mode.

9.2 Frequency Switching


The current output frequency (50Hz / 60Hz) is displayed in the lower right corner of the display. In the Setting Mode, press the DC power button to navigate to page P01, and the frequency will appear. Then, press the AC power button to switch the frequency options based on your requirements.

9.3 AC Charging Mode

The AC50P supports 3 AC charging modes - Standard, Turbo, and Silent, all configurable via the app. Alternatively, in the Setting Mode, press the DC power button to navigate to page P03, and the () icon will start flashing on the screen. Then, press the AC power button to enable or disable the Turbo charging mode.

Mode	Charging Power			Recharging Time	Note	Icon
	AC	PV	AC+PV			
Standard	310W	200W	310W	2 hours	More friendly to AC50P's battery.	None
Turbo	600W	200W	600W	80% charge in 50 minutes; full charge in 80 minutes	Comes in handy when recharging time is a priority.	
Silent	190W	190W	208W	3 hours	Offers a quiet, low-power operation for long battery life.	None

9.4 Power Lifting Mode

Power Lifting Mode allows AC50P to handle high-power resistive loads up to 1,200W, including electric blankets, kettles, hairdryers, and other heating devices. To enable it, access the Setting Mode, press the DC power button to navigate to page P04, and the () icon will appear. Then, press the AC power button to enable or disable the mode.

Notice:


- The Power Lifting Mode is not enabled by default and is only suitable for resistive loads with a power rating between 700W-1,200W.
- Although the AC50P can handle higher power demands, its actual operating power remains at 700W.

9.5 ECO Mode

ECO Mode is a power-saving mode that is enabled by default. When operating on ECO Mode, the AC / DC output will automatically turn off if the AC50P is bearing low (default 10W for AC, 5W for DC) or no load for a while. You can adjust these thresholds using the app if needed.

Notice:

When connecting a small power device, disable the ECO Mode for a successful and uninterrupted charge experience.

In the Setting Mode, press the DC power button to navigate to page P05, and the () icon will appear. Then, press the AC power button to enable or disable the mode.

9.6 Bluetooth On/Off

In the Setting Mode, press the DC power button to navigate to page P06, and the (✖) icon will start flashing on the screen. Then, press the AC power button to turn the Bluetooth on or off.

9.7 Grid Self-adaption Mode

If you're charging the AC50P using an unstable generator or grid voltage, or the total power demand of your connected devices exceeds the AC50P's input power, it is recommended that you enable the Grid Self-adaption Mode through the BLUETTI app to ensure a stable, safe charging experience for both the AC50P and your devices.

9.8 Exit Setting Mode

To save your AC50P settings and exit the Setting Mode, press and hold both the AC and DC power buttons at the same time.

Notice:

If you do not perform any operation in 1 minute, the AC50P will automatically exit the Setting Mode, and no changes will be saved.

10. BLUETTI App

Scan the QR code below or search "BLUETTI" in the App Store or Google Play to download the BLUETTI app.



For more details, please refer to *AC50P App User Manual*.

11. Specifications

AC50P				
Country / Region	JP	US	CN	EU/UK/AU/SA
Battery Capacity	504Wh / 22.5Ah			
Cell Type	Lithium Iron Phosphate (LFP)			
AC + DC Input	600W Max.			
Net Weight	About 6.9 kg / 15.21 lbs			
Dimensions (L × W × H)	280mm × 200mm × 220mm / 11in × 7.9in × 8.7in			
Charging Temperature	0°C to 40°C / 32°F to 104°F			
Discharging Temperature	-20°C to 40°C / -4°F to 104°F			
Storage Temperature	-20°C to 40°C / -4°F to 104°F			
Working Humidity	10% to 90%			
AC Output				
Power	700W Max.			
Voltage	100VAC	120VAC	220VAC	230VAC
Current	7A	5.8A	3.2A	3.0A
Frequency	50Hz / 60Hz			
DC Output				
Cigarette Lighter Port × 1	12V / 10A			
USB-A × 1	5V / 3A			
USB-C × 2	5 / 9 / 12 / 15 / 20V, 3A; 20V / 3.25A (Per Port)			
Wireless Charging	5W / 7.5W / 10W / 15W			
AC Input				
Voltage	100VAC	120VAC	220VAC	230VAC
Max. Current	9A	9A	4.9A	4.8A
Frequency	50Hz / 60Hz			
UPS	Switching time ≤20ms			
Charging Power	600W Max. (0%-80% in 50 minutes @ 25°C / 77°F)			
DC Input				
Interface	XT60PM-M			
Power	200W Max.			
Current	8.5A Max.			
Voltage	12V to 28V			
Radio Frequency				
	Operating Frequency	Maximum Transmit power	Modulation mode	
BLE5.0	2402MHz~2480MHz	-2.26dBm	GFSK	

12. Troubleshooting

In the Setting Mode, press and hold the DC power button for more than 2 seconds until the error code appears on the display. Please refer to the table below for helpful guidance.

Error Code	Description	Troubleshooting
E001	Inverter overload	Check if the power consumption of your devices is too high. Reduce the load if necessary.
E002	Temperature protection	Check if any of your devices are overheating. Allow them to cool down before use.
E003	Inverter short circuit	Check if the power consumption of your devices is too high. Reduce the load if necessary.
E004	Output failure	Ensure the output voltage is within $\pm 10\%$ of the rated voltage or proper grid connection.
E016	Fan failure	Check if the fan is blocked, unplugged, or not functioning properly. Ensure proper ventilation.
E033	PV overvoltage	Make sure the PV input voltage is within the range of 12V to 28VDC.
E065	Cigarette lighter port short circuit	Check if the power consumption of your devices is too high. Reduce the load if necessary.
E068	Cigarette lighter port overtemperature	Wait for the device connected to the cigarette lighter port to cool down.
E085	Charging temperature too high	Wait for the unit to cool down before charging.
E086	Charging temperature too low	Make sure the unit is placed in an ambient temperature of 0°C to 40°C (32°F to 104°F).
E087	Discharging temperature too high	Wait for the unit to cool down before discharging.
E088	Discharging temperature too low	Make sure the unit is placed in an ambient temperature of -20°C to 40°C (-4°F to 104°F).
E113	Grid overvoltage	Check if the grid voltage is too high. Contact your local power provider if necessary.
E114	Grid undervoltage	Check if the grid voltage is too low. Contact your local power provider if necessary.
E115	Grid overfrequency	Check if the grid frequency is too high. Contact your local power provider if necessary.
E116	Grid underfrequency	Check if the grid frequency is too low. Contact your local power provider if necessary.
E117	Grid oscillation	Disconnect the grid input and contact BLUETTI support for further assistance.
Others	/	Please contact BLUETTI support for assistance.

Appx. 1 Estimating Operation Time

Operation time = Battery Capacity (Wh) × DoD × η ÷ (Load Power + AC50P Self-consumption)

Notice:


DoD refers to the depth of discharge. AC50P works at 90% DoD for longer battery life.

η is the conversion efficiency of the inverter, typically over 85% for AC50P.

The self-consumption of AC50P is approximately 9W.

E.g. If you have a 40W refrigerator, you can run it for about 6.8 hours.

Operation time = 504Wh × 90% × 85% ÷ (40W + 9W) ≈ 7.4 hours.

 **Notice:** Please keep in mind that the estimated operation time provided is for reference purposes and may vary based on actual usage conditions. Factors such as low temperature and excessive loads can significantly affect the battery capacity, leading to a reduction in the average operation time.

Appx. 2 FAQs

Q1: How do I know whether my devices will work well with this product?

A: Please evaluate the total constant load of your devices. If it doesn't exceed the Max. output power of AC50P (700W), you can use this power station to run your devices.

Note: Some devices with built-in motors or compressors may start at 2-4 times the rated power, which can easily overload the AC50P.

Q2: Can I use third-party solar panels to charge this product?

A: Yes, you can. However, make sure your solar panels have an open circuit voltage of 12V-28V and are equipped with MC4 connectors. It's also important not to mix different types of solar panels.

Q3: What is ECO Mode and can I turn it off?

A: ECO Mode is a power-saving mode that is enabled by default. When operating on ECO Mode, the AC / DC output will automatically turn off if the AC50P is bearing low (default 10W for AC, 5W for DC) or no load for a while. You can adjust these thresholds using the app if needed. When connecting a small power device, disable the ECO Mode for a successful and uninterrupted charging experience.

Q4: Can it charge and discharge at the same time?


A: Yes. It supports pass-through charging. The AC50P comes with the premium LiFePO₄ battery and proprietary Battery Management System to ensure that it can charge and discharge at the same time.

Q5: Why is the charging power often too low?


A: AC50P has a built-in intelligent BMS that automatically adjusts the charging power in response to the battery temperature and SoC, thus protecting the battery and extending its service life.

Appx. 3 Grounding Guidelines

Only use the grounding terminal when the AC50P is connected to the home grid using a 2-pin cable, or if the wall outlet's grounding is ineffective, and the connected device features a metal case.

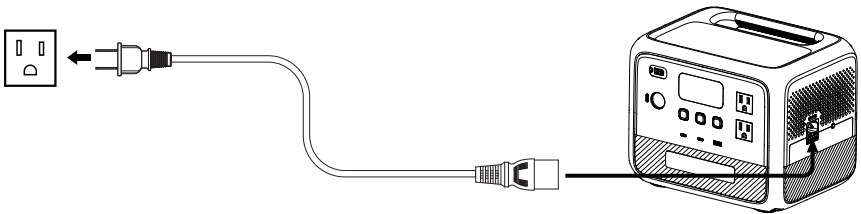


Use a cable with OT terminals for grounding. Connect one end to the grounding terminal with a grounding screw and the other end to the wall outlet or home distribution box ground.

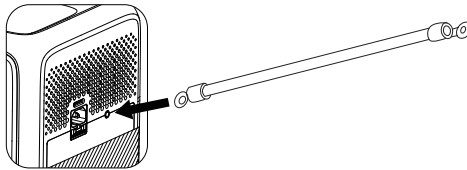

The grounding terminal is unnecessary in the following scenarios:

- When connecting the AC50P to the wall outlet with a 3-pin cable, it's already grounded effectively.

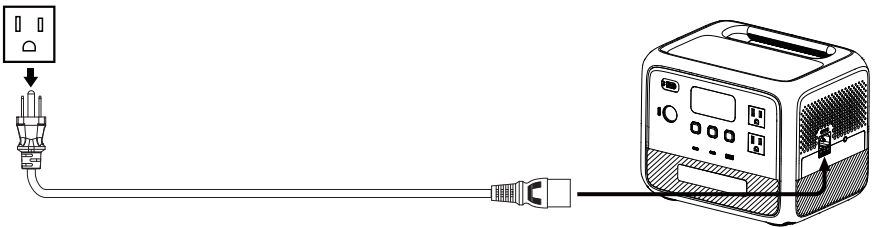

- When the AC50P is not connected to the grid, touching its case won't cause an electrical shock.

Appx. 4 FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IMPORTANT NOTE: FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

Appx. 5 IC Caution

This device contains licence-exempt transmitter(s) / receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

RF exposure statement: The equipment complies with IC Radiation exposure limits set forth for uncontrolled environments. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) L' appareil ne doit pas produire de brouillage;
- (2) L' appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d' en compromettre le fonctionnement.

Déclaration d'exposition aux RF : L'équipement est conforme aux limites d'exposition aux rayonnements IC définies pour les environnements non contrôlés. Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.

CAN ICES-3 (B)/NMB-3(B) (Canada)

This Class B digital apparatus complies with Canadian ICES-003.